



Buffet Warmer INSTRUCTIONS

MODELS: 09362300
09362301
09362302
09362303
09362304
09362305
09362306



Safety instructions .Read all instructions before using.

- **WARNING: Improper installation, adjustment, alteration, service or maintenance can cause property damage, injury or death. Read the Installation, Operating and Maintenance Instructions thoroughly before installing or servicing this equipment.**
1. The appliance may only be installed and connected to the power supply, maintained, and repaired by a qualified electrician in accordance with safety regulations. Do not repair or replace any part of the appliance unless specifically recommended in this manual.
 2. Work performed incorrectly puts your safety at risk.
 3. This appliance is for commercial use only. Use for any other purpose is at the owner's risk and could be dangerous. The manufacturer can't be held responsible for damage caused by improper use of this appliance.
 4. **CAUTION:** Keep children away from this appliance.
 5. Do not leave children alone - children should not be left alone or unattended in area where appliance is in use. They should never be allowed to sit or stand on any part of the appliance.
 6. Do not touch the cooking surface or areas near it.
 7. The connecting cable must not come in contact with the hot cooking surface.
 8. Don't switch the cooker on unless you're using it.
 9. **Do not put kitchen foil or plastic on the cooking surface.** Things that can melt (i.e. plastics, foils or sugar), must be kept away from the cooking surface. Be sure to **immediately remove or lift off any melted item from the hot cooking surface.**
 10. Lime deposits are harmful to the cooking surface.
 11. CAUTION – HOT.
 12. WARNING: Risk of Fire install not closer than 254 mm above the food support surface.
 13. WARNING: Risk of Fire, Do Not Install Closer Than 40 mm To a non-metalic wall or adjacent surface except 30 mm for the mounting surface.
 14. TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT REMOVE THIS COVER. NO USER-SERVICEABLE PARTS INSIDE. REPAIR SHOULD BE DONE BY AUTHORIZED SERVICE PERSONNEL ONLY.



SAVE THESE INSTRUCTIONS

Explanation of graphical symbols in the warning label as follows



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of fire or electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.


INSTALLATION

- a) **For safe and proper operation, the unit must be located the correct distance from combustible walls and materials. If safe distances are not maintained, discoloration or combustion could occur.**
- b) **To prevent combustion or damage to materials do not install strip heater less than 254 mm above a non-metallic surface. Do not install strip heaters above non-metallic surface. Install all strip heaters so there is a minimum distance of 40 mm from a non-metallic wall or adjacent surface except 30 mm for the mounting surface.**
- c) **To avoid any injury or damage to the unit when using chains for installation, the chains must have sufficient strength and be securely fastened, or the unit could become loose or fall.**


The following items is Safety instructions Only for MODELS: 09362300; 09362301; 09362302; 09362303; 09362304; 09362305; 09362306.

Mounting procedure:

1. Open the carton, you will find 2 pieces Mounting Brackets and 1 piece Main Body.
2. There is 2 screws on each side of the Main Body, before assemble you should unscrew them out of the base(PIC.1), then screw them to fix the Mounting Brackets on the base of the Main Body tightly(PIC.2).

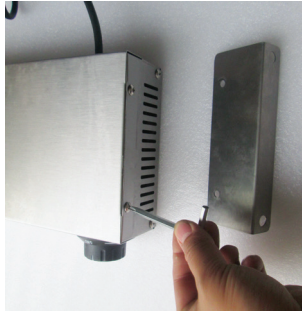

PIC.1

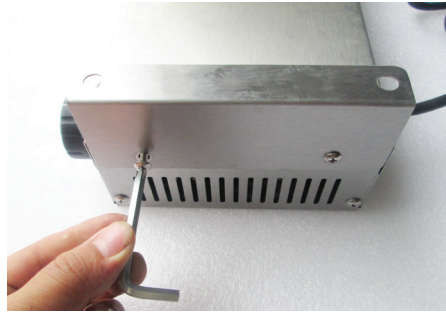


PIC.2

CAUTION: To prevent combustion or damage to materials do not install standard wattage strip heater less than 10" (254 mm) above a non-metallic surface.



STEP1: Mounting the unit under a shelf, please drill 4 holes (DIA. 6 mm) as above size on the shelf.

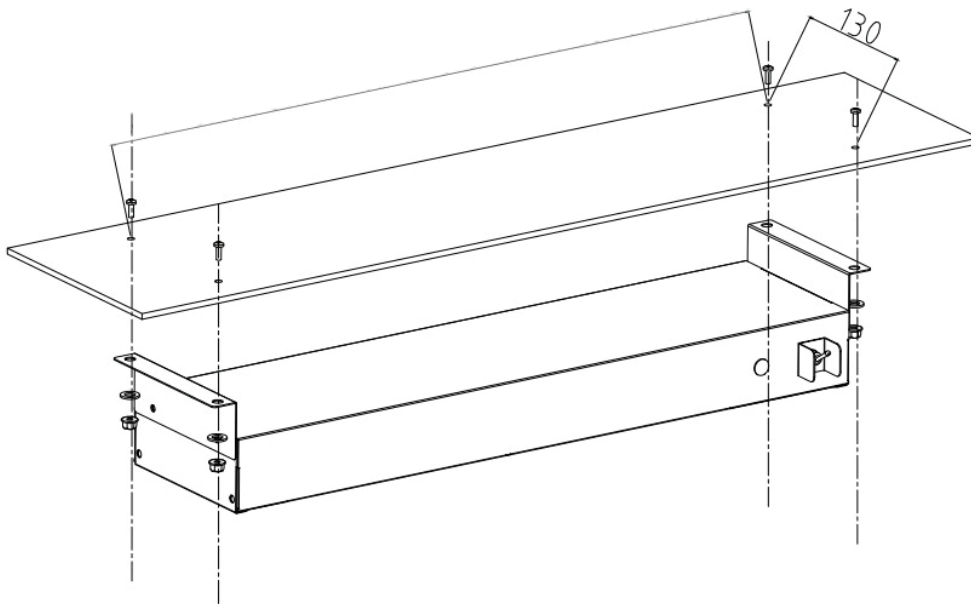



STEP2: Align the shelf 4 drilled holes to the bracket plate mounting holes of the unit. Secure bracket with supplied screws and nuts. Fasten bracket to the underside of the shelf using appropriate fasteners. (Not supplied by us.)

CAUTION: To prevent the machine breaking away from the shelf, you must install the unit into a strong and thick shelf which can support more than 3 times weight of this Warmer. **Installation should be made by a qualified, licensed electrician.**

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, CONNECT THE APPLIANCE TO INDIVIDUAL BRANCH CIRCUIT, EACH BRANCH CIRCUIT WITH A 20 AMPERES OVERCURRENT PROTECTIVE DEVICE.

Operation

- A. All foodservice equipment should be operated by trained personnel.
- B. Do not allow your customers to come in contact with any surface labeled "CAUTION HOT".
- C. Switch on unit. Place precooked product under heat source. Maximum heat coverage equivalent to unit length.
- D. Never hold food below 150°F.

Cleaning

- A. Never clean any electrical unit by immersing it in water.
- B. Never clean any electrical unit using water jets.
- C. Disconnect power before cleaning or servicing units.
- D. Clean unit daily. Use warm, soapy water. Mild cleansers and non-abrasive pads may be used to remove baked-on food.

Troubleshooting

Always ask and check:

1. Is the unit connected to a live power source?
2. Check the circuit breaker.
3. Is the power switch on and pilot light illuminating?
4. Check the rating label. Is the unit operating on proper voltage?